



P | ower Generation Limit

For On-grid Inverters



This document describes the ways to adjust inverters' power generation limit through operation panel



Fig. 1 Operation Panel


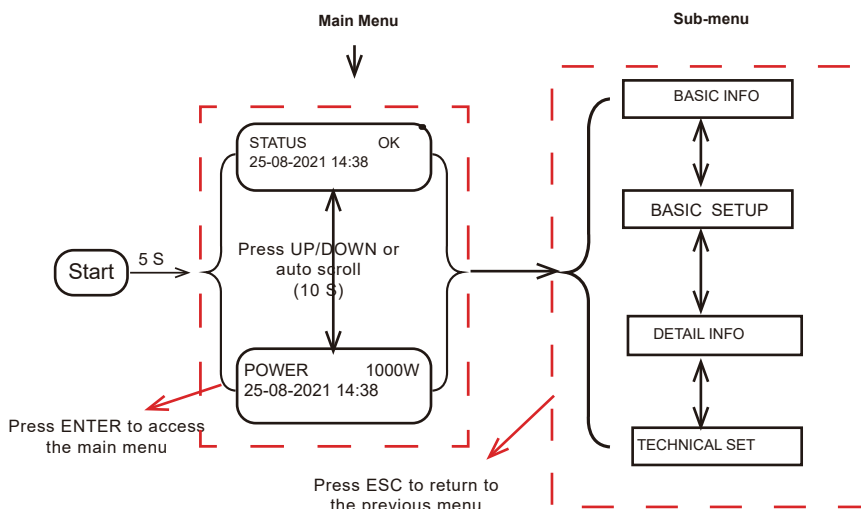


Fig. 2 Menu Overview


Step A: Go into the 'Technical Set' menu

Start from the main menu of the LCD

- 1) Press 'Enter' to access the sub-menu and find the 'Technical Set' by pressing 'Up' or 'Down' key

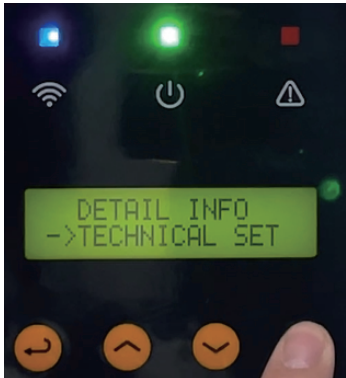


- 2) Press 'Enter' and enter the password (default password is 1000) to get into the 'Technical Set' menu

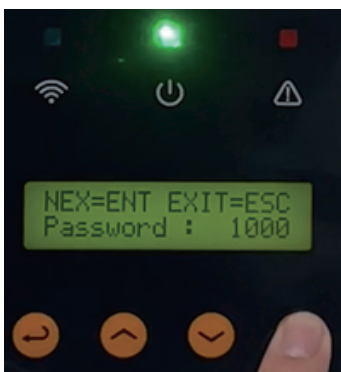

Press 'Enter' to move the cursor, and press 'Up' and 'Down' to change numbers


Step B: Enable all setups

Go into the **All Set Enable** to change the status into ON

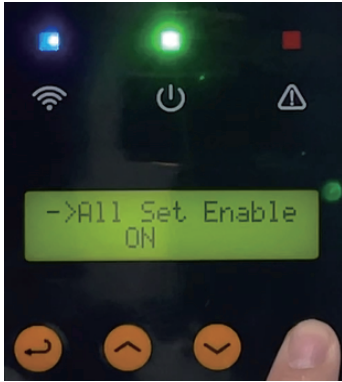


Step C: Adjust Power Generation Limit

1) Press 'Up' or 'Down' to find the 'Pmax Limit' and Press 'Enter' to get inside

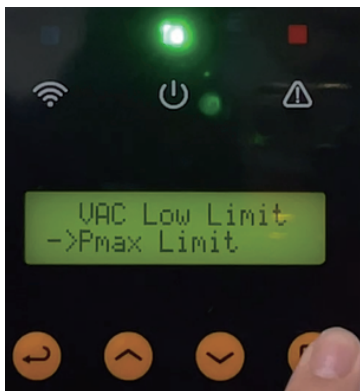

2) Adjust the value manually

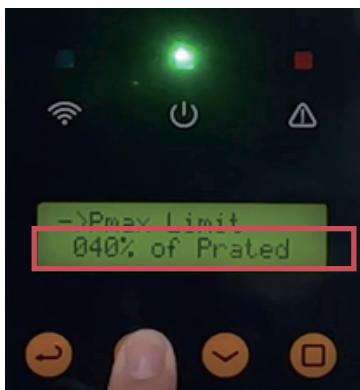

Press 'Enter' to move the cursor, and press 'Up' and 'Down' to change numbers

3) Press 'Enter' to save the setting.